

ADDER BOX

INSTALLATION AND SETUP INSTRUCTIONS




STEP 1

Mount the adder box, and ensure the yellow cable can reach the pump and the gray cable can reach the Aqua-Lab panel.



STEP 2

Identify the gray cables to plug into the motor starter port on the Aqua-Lab M12 junction block. These cables will be labeled "Manifold 01," "Manifold 02," and "Manifold 03." The adder box can control three panels and two pumps.

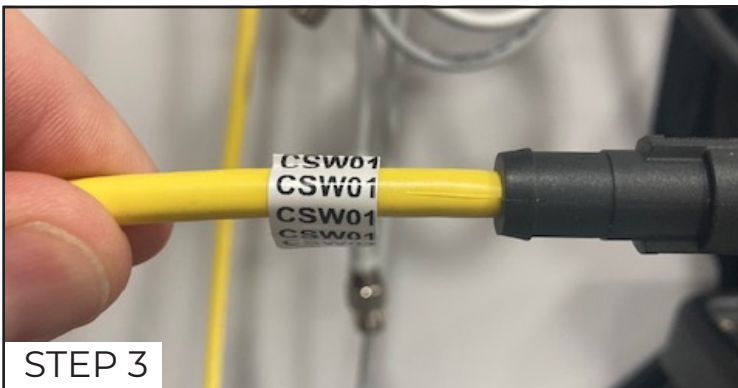


STEP 3

Identify the yellow cables labeled "CSW01" and "CSW02." These will plug into the pump.



STEP 4

Plug the gray "Manifold 01" cable into the first panel's motor starter port in the M12 junction block.

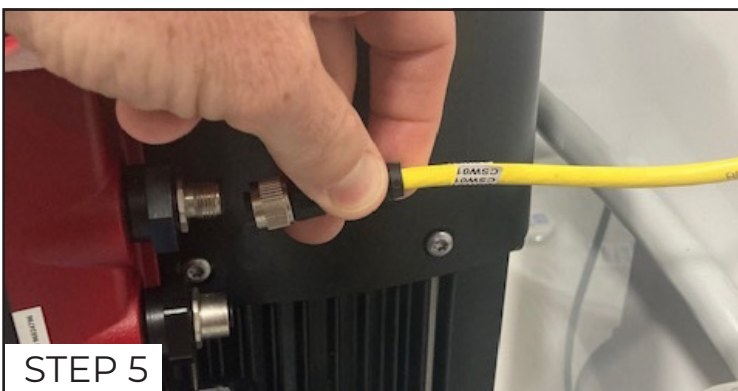

STEP 5

Plug the yellow "CWS01" cable into the first pump. This pump will now turn on any time the first panel has a function turn on.

If you have two panels connected to one pump, plug "Manifold 01" into the first panel, "Manifold 02" into the second panel, and "CWS01" into the pump. Then, any time a function on either panel turns on, the pump will also turn on for either panel.

If you have two pumps and two panels, you would use "Manifold 01" and "CWS01" for the first panel and pump, and "Manifold 02" and "CWS02" for the second panel and pump.

Visual aids on the next page: The following photos help show cables correctly set up on the adder box.

ADDER BOX

INSTALLATION AND SETUP INSTRUCTIONS

Visual aids: The following photos help show cables correctly set up on the adder box.



 **Sonny's Car Wash**
Backroom
by Hydra-Flex

Hydra-Flex: 952-808-3640

Sonny's: 800.327.8723

hello@hydraflexinc.com

www.sonnysdirect.com